


The installation of new handlebars on a metric bike is pretty straight forward. We would like to highlight a few steps make intstall easier.



First, you'll notice your control housings have a small tab on the collar of the switch housing. The OEM's did this to make locating your switch housing easier but it prevents the use of an aftermarket handle bar. Since most of the bars we sell are not drilled for the tab, you will need to remove it. The results will be more adjustability in switch house location. Note, the controls will stay tight even without the factory tab. The tab is highlighted in the image above.

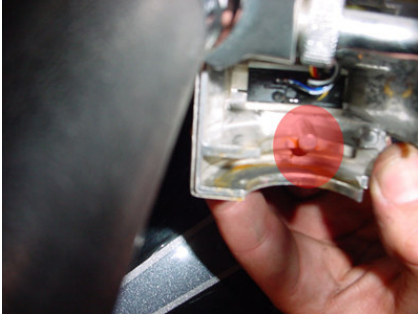

You can file the tab down with either a hand file or a die grinder. We recommend a die grinder.

*"Drilling a hole in the Aeromach handle bar voids the warranty and we will not accept returns on an altered bar."*

Above is a pic of us grinding down the tab.

Tip: When installing the factory hand controls to the new bar, slide the throttle housing and throttle over the end of the new bar before securing the bar to the bike.

